

** Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

POWERED BARROWMATE



300kg

LOAD CAPACITY - 300kg

Evenly distributed loads as recommended

DO NOT OVERLOAD or obstruct operator view with high loads.



POWER – ON/OFF SWITCH

Turn key switch to on position for normal operation.



EMERGENCY STOP

Stops the unit when reversing.



PADDLE LEVER

Push lever forward for forward motion.

Push lever down for reverse motion.

FORWARD MOTION IS ALWAYS RECOMMENDED!



SPEED CONTROLLER

Adjust speed for load and the speed required –

WALKING PACE IS RECOMMENDED!



UP/DOWN CONTROLS


Ensure it is safe to move the bucket up/down.



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.

POWERED BARROWMATE

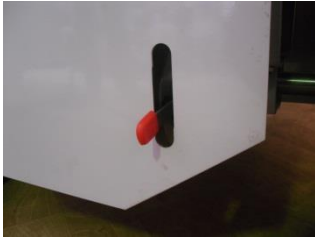

FREE WHEEL LEVER

Push to disable brake motor to enable free wheel if batteries are flat.

This enables trolley to be used normally with no power drive engaged.

ALWAYS do this on a level surface.



BATTERY INDICATOR

When low connect to charger as soon as possible



CHARGING

Unit has an external charger.

Charging point is located on the side of the handle at the bottom of the unit.

Plug lead into female position and then into powerpoint – charge with keyswitch in OFF POSITION.

OVERNIGHT CHARGE IS RECOMMENDED



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.