


** Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

POWERED BARROWMATE

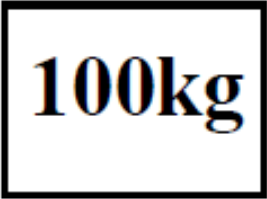

100kg

LOAD CAPACITY – 100 KG

Evenly distributed loads as recommended

DO NOT OVERLOAD or obstruct operators view with high loads.

POWER – ON/OFF SWITCH

Turn key switch to on position for normal operation.



PADDLE LEVER

Push lever down for forward motion.
Red button doesn't operate.



SPEED CONTROLLER

Adjust speed for load and the speed required – Speed is controlled dependant on how hard your push the throttle.
WALKING PACE IS RECOMMENDED



RAISE AND LOWER BUCKET

Release the black lever, use the handle above the lever to raise the bucket. Once bucket is empty lower back down into position and re-lock black lever.



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.

POWERED BARROWMATE



BRAKE LEVER

Pull this up to engage brakes.



BATTERY INDICATOR

When low connect to charge as soon as possible.



CHARGING

Unit has an external charger which is located in a compartment underneath the deck at the front of the unit.

Charging point is located underneath the handle at the bottom of the unit.

Plug lead into female position and then into powerpoint – charge with keyswitch in OFF POSITION.

OVERNIGHT CHARGE IS RECOMMENDED



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.