


* Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.

H75

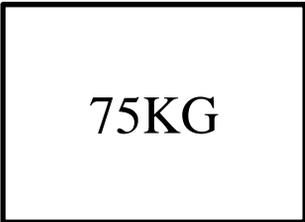

75KG

LOAD CAPACITY – Driver plus 75kg on a level surface

Evenly distributed loads as recommended

OPERATION

The unit is designed to be pushed into position. The front of the unit is the end with the cargo platform.




POWER – ON/OFF SWITCH

The ON/OFF switch is located on the right hand side of the H75.

Press the ON side to turn the H75 on.

Press the OFF side to turn the H75 off.

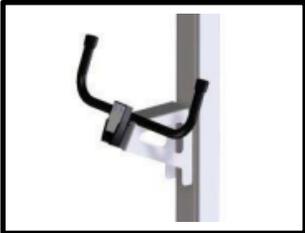

CONTROLS

When standing behind the H75, use the handles to manoeuvre the lifter forwards or backwards.

To raise the platform press the UP button to lift and press the DOWN button to lower.



BATTERY INDICATOR

When fully charged the lights will illuminate to show 100%, as you use the H75 the lights will change to show the level. Once the charges falls to 40% we recommend charging, a red light will flash for approximately 10 minutes before the unit loses all charge.

** Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

H75



CHARGING

The charging point is located on the back of the H75's body.

Plug the charger lead into the power point. – Charge with key switch in the OFF POSITION.

A red light will come on showing charging has begun.

If a flashing light appears please contact your supplier.

OVERNIGHT CHARGE IS RECOMMENDED

ONLY USE THE CHARGER SUPPLIED WITH THE UNIT.



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.