

* Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.

POGO



LOAD CAPACITY – 100 KG

Evenly distributed loads as recommended
DO NOT OVERLOAD or obstruct operator view with high loads.



CONTROLS

At the location, press the 'lift up' button until the POGO is at the correct height.

With the load above the surface, press 'lift down' to lower the load. Then pull back from underneath the load.



PLACEMENT

Move the load to the location, as with an ordinary hand truck



CHARGING

Unit has an external charger which is supplied separately to the machine

The charging point is located on the back of the machine.

Plug the charger lead into the plug on the POGO (the plug will only fit the correct end) and then into power point.



OVERNIGHT CHARGE IS RECOMMENDED

ONLY USE THE CHARGER SUPPLIED WITH THE UNIT.



*Please ensure you are familiar with the manual and the correct operating instructions.
If in doubt contact supplier before use.*