

** Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

POWERED PRESTAR NF



300 KG

LOAD CAPACITY – 300kg

Evenly distributed loads as recommended

DO NOT OVERLOAD or obstruct operator view with high loads.



POWER – ON/OFF SWITCH


Turn key switch clockwise to on position for normal operation



EMERGENCY STOP BUTTON

PUSH for OFF – for normal operation

PULL for ON

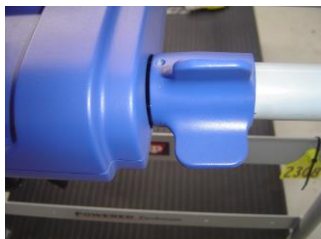

PADDLE LEVER

Push lever forward for forward motion.

Push lever down for reverse motion.

(Buzzer should sound in reverse)

FORWARD MOTION IS ALWAYS RECOMMENDED!



SPEED CONTROLLER

Adjust speed for load and the speed required –


WALKING PACE IS RECOMMENDED!



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.

POWERED PRESTAR NF

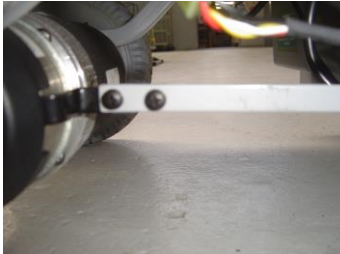

FREE WHEEL LEVER

Push to disable brake motor to enable free wheel if batteries are flat.

This enables trolley to be used normally with no power drive engaged.



BRAKE CASTOR

Press pedal to engage brake and disengage brakes as required.

Brake should be used if stopped on incline.



CHARGE POINT

Plug lead into female position and then into powerpoint – charge with keyswitch in OFF POSITION.



OVERNIGHT CHARGE IS RECOMMENDED



Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.