

** Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

POWERED ULTIMATE LITE



350kg

LOAD CAPACITY - 350kg

Evenly distributed loads as recommended

DO NOT OVERLOAD or obstruct operator view with high loads.

POWER – ON/OFF SWITCH

Turn key switch to on position for normal operation.

If powered status light flashes there may be a fault, please contact your supplier.

EMERGENCY STOP

Stops the unit when reversing.

PADDLE LEVER

Push lever forward for forward motion.

Push lever down for reverse motion.

(Buzzer should sound in reverse)

FORWARD MOTION IS ALWAYS RECOMMENDED!

SPEED CONTROLLER

Adjust speed for load and the speed required –

WALKING PACE IS RECOMMENDED!

UP / DOWN CONTROLS

Ensure it is safe to move unit up / down

Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.





POWERED ULTIMATE LITE



ELECTRONIC BRAKE RELEASE

Push to disable drive motor when power is on.



FREE WHEEL LEVER

Push to disable brake motor to enable free wheel if batteries are flat.

This enables trolley to be used normally with no power drive engaged.

ALWAYS do this on a level surface.



BATTERY INDICATOR

When low connect to charger as soon as possible



CHARGING

Unit has an external charger which is located in a compartment underneath the deck at the front of the unit.




It is **RECOMMENDED** before accessing the charger the locking mechanisms under the scissor are slid into the locking position.



Charging point is located underneath the handle at the bottom of the unit.

Plug lead into female position and then into powerpoint – charge with keyswitch in **OFF POSITION**.

OVERNIGHT CHARGE IS RECOMMENDED

 Please ensure you are familiar with the manual and the correct operating instructions.

If in doubt contact supplier before use.