

*\*Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

## EZ WHEEL



500kg


### **LOAD CAPACITY –**

Load Capacity is based on even load on a flat, hard and even surface  
Evenly distributed loads is recommended  
**DO NOT OVERLOAD** or obstruct operator view with high loads.



### **TURN ON**

To turn the Ez Wheel ON push the stainless button mounted under the control handle. Around the button should illuminate green indicating the batteries are full and ready to work.

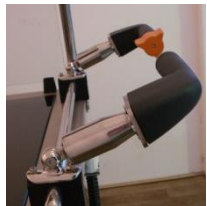

### **FORWARD MOTION**

Turn ON the P2GO Ez Wheel. Stand behind the control handles and hold the 'bull-horns' with two hands. Look straight ahead. Press the throttle lever in an upward direction with your thumbs slowly to start moving forward. The speed should increase as you press more.



### **STOP**

Slowly releasing your thumbs from the throttle lever will reduce the speed, once released the cart will come to a stop. Please note this unit contains a motor brake so Castor brakes are still required if leaving it on a hill.



### **REVERSE MOTION**

Press the throttle lever in a downward direction with your thumbs slowly to start moving in reverse.



*Please ensure you are familiar with the manual and the correct operating instructions.*

*If in doubt contact supplier before use.*

*\*Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.*

## EZ WHEEL



### **FORWARD STEERING**

Look straight ahead. When you need to turn right, you turn the 'Caster' at the control and nearest to you to the right. Visa Versa for the left turn.

### **REVERSE STEERING**

The operation is the opposite to forward steering.



### **MOVE MANUALLY (FREE WHEELING)**

You can push or pull the Ez Wheel at anytime just like a manual trolley. If you have the motor brake on it will give more resistance to Free wheel mode



### **SLEEP MODE**

The unit has sleep mode to conserve the battery, simply turn the unit off then on to restart.



### **BATTERY CHARGING**

On a level dry surface, turn off the power and plug end of the AC cord into an outlet. Charge for 6 – 8 hours.



### **WARNING**

Before you operate, practice in an open area for at least one hour to get familiar with the Ez Wheel and gain the operational skills. Be alert.

### **EMERGENCY STOP**

In case of out-of-control or any concerns turn the power off immediately!



*Please ensure you are familiar with the manual and the correct operating instructions.*

*If in doubt contact supplier before use.*