


\* Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.

## CADDY

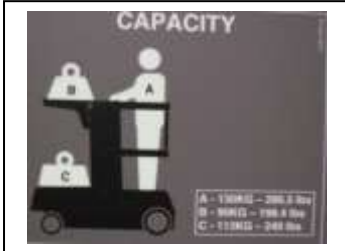

**LOAD CAPACITY** – Driver plus 130kg on a level surface  
Evenly distributed loads as recommended  
**DO NOT OVERLOAD** or obstruct operator view with high loads.

### OPERATION

The unit is designed to be pushed into position with powered assistance. The front of the unit is the end with the cargo platform.



### POWER – ON/OFF SWITCH

The Key switch is located at the front of the unit underneath the platform.

Pull the lever down to open the compartment underneath the unit.

Turn the Key switch to position 1 for normal operation.

Position 2 allows manual override using green button to the right of switch.



### EMERGENCY STOP BUTTON

Push to disable the CADDY when power is on. This will shut down all systems apart from the brake. This button should not be used as a normal form of braking or as an on off switch. To reset, simply pull on the button until you feel it change position. The CADDY has two stop buttons, one located near key switch, second one next to the up and down buttons.



### CONTROLS

When standing on the CADDY ensure the doors are closed behind you.

Use the handle to manoeuvre forward or backward located on the right hand side, push forward to go straight and pull backwards to reverse.

To manoeuvre left or right push the lever on the left hand side, left to turn left, right to turn right.

Push the green button at the top on the right hand side to lift the platform, release to stop.


Push the green button at the bottom on the right hand side to lower the platform, release to stop.





# Quick User Guide

## CADDY

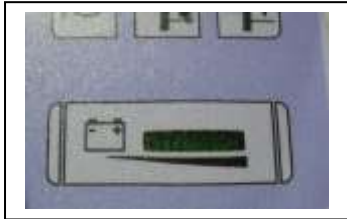

### **BATTERY INDICATOR**

When fully charged the lights will illuminate to show 100%, as you use the CADDY the lights will change to show the level. Once the charges falls to 40% we recommend charging, a red light will flash for approximately 10 minutes before the unit loses all charge.

### **CHARGING**

The charging point is located on the front side on the CADDY's body.



Plug the charger lead into the plug on the CADDY (the plug will only fit the correct end) and then into power point. – Charge with key switch in the OFF POSITION.

A red light will come on showing charging has begun. If a flashing light appears please contact your supplier.

**OVERNIGHT CHARGE IS RECOMMENDED**

**ONLY USE THE CHARGER SUPPLIED WITH THE UNIT.**

### **EMERGENCY USE ONLY**

If the CADDY is in the raised position and will not lower pull the red lever on the front of the unit to lower.



*Please ensure you are familiar with the manual and the correct operating instructions.*

*If in doubt contact supplier before use.*